

# Step and repeat banner stand


For the 8 x 8 and 10 x 8 ft banners. The telescoping stand adjusts to either size.




- 1 Lay out the parts:** two feet, the upright poles, the crossbar sections and the travel bag.



- 2 Uprights.** Screw an upright pole into the center of each foot.

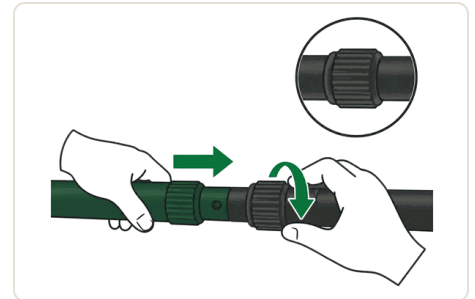


- 3 Crossbars.** Push the crossbar sections together and twist the collars to lock them.

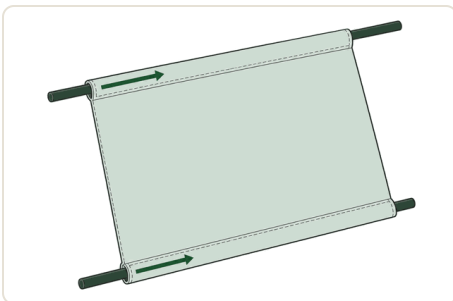

- 4 Hang the banner.** Slide one crossbar through the top pole pocket and one through the bottom pocket.



- 5 Connect.** Fit each crossbar end into the fitting on an upright and tighten the knob.

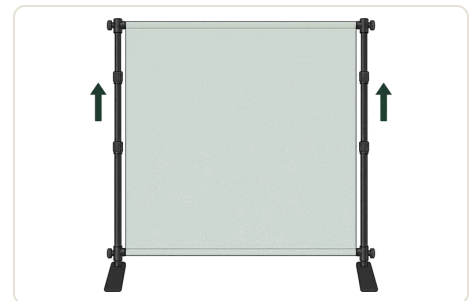

- 6 Raise it.** Extend the uprights until the banner hangs flat and tight, then lock the collars.

## GOOD TO KNOW

- For indoor use.
- The stand poles are 1.625 in across and telescope to fit the banner.
- The double stitching on each pole pocket shows on the banner.

## IN THE BOX

- Banner + Stand + Carry Bag: the printed banner, the stand and a travel bag.
- Printed Banner Only: the banner, for a stand you already own.
- The fabric is washable.