


Custom canopy tent

Shown on the 10 x 10 ft tent. The 10 x 15 and 10 x 20 ft tents have six legs and set up the same way. Two people make it easy.

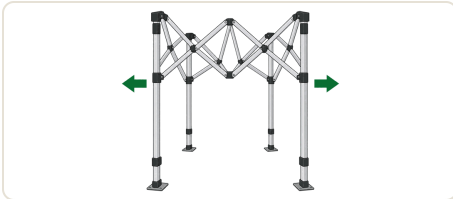


- 1 Pull it partly open.** Stand the frame on its feet and pull it open to about arm's length, one person each side.




- 2 Add the canopy.** Lay it over the frame, peak in the center, each corner over a corner of the frame.



- 3 Open it fully.** Walk the frame open until the trusses are straight on every side.

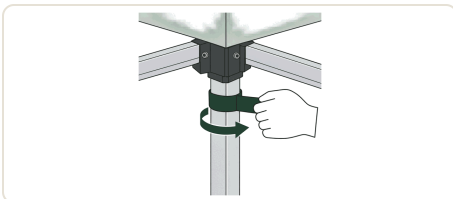


- 4 Fasten the corners.** Wrap the hook-and-loop strap at each canopy corner around the frame leg.

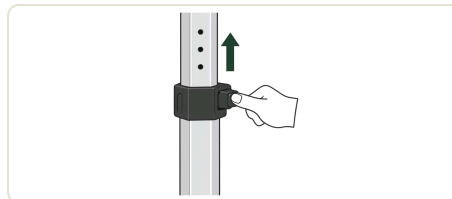

- 5 Set the height.** Press the lever on each leg slider and raise the leg to one of its three heights.



- 6 Full walls:** hang the wall from the top of the frame and wrap its straps around the legs.

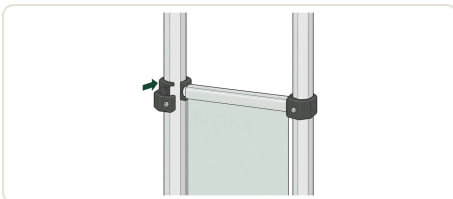

- 7 Half walls:** clamp the rail between two legs at waist height and hang the half wall from it.



- 8 Secure it outdoors** with a sandbag on each leg, or ropes and stakes.



- 9 Done.** To pack up, reverse the steps and fold the frame into its carry bag.

GOOD TO KNOW

- Always secure the frame to the ground outdoors, with stakes or sandbags, and take the tent down in strong wind.
- Zippers join walls along their sides.
- The canopy and walls are made to fit this frame.

CARE

- Clean with water, a soft sponge and mild soap. We do not recommend machine washing.
- Let the canopy and walls dry completely before you pack them away.